

Specification Sheet No

PSA
85

Description

GRADUS CGS2590/5090/7590
STANDARD CORNER GUARD

Date

MAY
2023



ARCHITECTURAL SPECIFICATION / BOQ

SPECIFICATION:

Supply and install 25 x 25/50 x 50/75 x 75mm one-piece surface mount corner guards, through-coloured, easy-to-clean PVC-u, textured to conceal the effects of impact and abrasion, supplied with tape for quick and easy installation, or without tape for installing with a Polyflor approved contact adhesive (Qualichem's BAN 523 or iTe's GripiTe C60), available in 35 colour options, supplied in 0.80m/1.00m/1.22m/2.00m/2.44m/2.70m/4.00m lengths or cut lengths.

Colour:

Code:

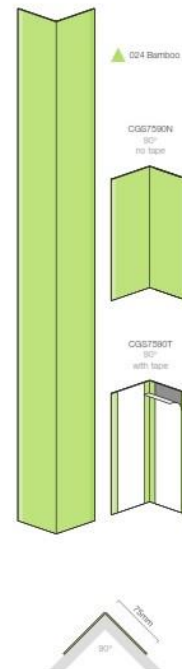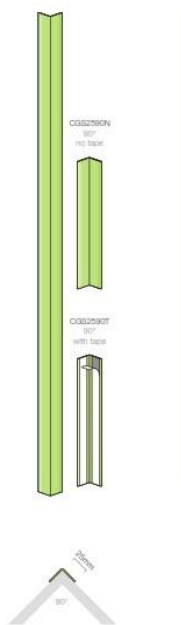

SPECIALIST FLOORING & WALL PROTECTION PARTNER

Tel: 011 609 3500 | Email: marketing@polyflor.co.za | www.polyflor.co.za
Poly Sales House, 8B Buwbes Road North, Sebenza, 1609, South Africa. PO Box 3967, Edenvale, 1610, South Africa

Poly Sales Africa (Pty) Ltd. trading as Polyflor South Africa. Company Registration 2004/012256/07

INSTALLATION:

Material must be installed in environmentally controlled conditions.

When installing onto aluminium substrates, use Polyflor approved contact adhesive.

When installing onto drywall, prime drywall surface with paint primer and then install with a Polyflor approved contact adhesive.

1. All corner guards must be allowed to acclimatize to reach room temperature 24 hours prior to installation. The optimum temperature is between 16°C and 18°C.
2. Prior to installation a full inspection of the substrate should be undertaken to ensure that the substrate is flat, sound, and free from all contaminants, and if necessary, thoroughly primed. Any damage to the substrate should be made good and allowed to cure prior to commencing installation. On a wall where wallpaper is present Polyflor would recommend that the paper directly behind where the product will sit is removed and the substrate made good. The product should then be adhered directly to the substrate.
3. Prior to offering up the corner guard to the substrate ensure that accurate measurements have been taken to define the correct size requirements. PVC-u corner guards can be easily cut to size using a suitable circular saw/hand saw. Ends should be de-burred by use of a fine file/sandpaper. Cut as required prior to installation.
4. Peel off the tape's protective cover from the tape-on corner guard. Starting at the bottom, position the corner guard on the wall. Continue installation by making contact between the corner guard and the wall over the entire height of the corner guard. Apply firm pressure to the entire surface of the corner guard to ensure a firm bond. An extension roller or a wood block covered in a soft cloth will aid this step.
5. When adhering standard corner guards without tape to non-porous or difficult surfaces, a Polyflor approved contact adhesive (Qualichem's BAN 523 or iTe's GripiTe C60) should be used to adhere to the surface.

MAINTENANCE:

A regular scheduled maintenance programme should be employed to prevent the build-up of dirt and grease, which will detract from the overall appearance of the product and can lead to the spread of germs and bacteria.

Apply a neutral cleaner to a micro fibre cloth and wipe the surface of the profile. When cleaning handrails, particular attention should be paid to the underside of the handrail as this is where dirt and grease can build up.

The cleaned surface should then be 'rinse wiped' using clean water and then thoroughly dried using a soft cloth. This ensures all cleaning residue is removed.

Abrasive cleaners, solvents, or cleaning pads (e.g., Thinners, Turpentine, Handy Andy) should NOT be used as they will damage the profile surface.